

Assembly Instructions

Instructions are based on the ELO® Adapt desk but can be used for any ELO or UNE-T desks

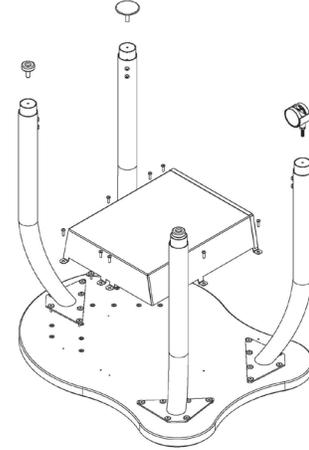
Before you begin, please make sure all parts and proper quantities are included. (See Part Identifier Key page) Any parts damaged during shipment must be reported within 24 hours of receipt. To report information regarding damages or if you have any questions, please call 800.242.2303.

Step 1:

- Place top face down on a protected flat surface.

Step 2:

- With legs installed, align tabs of wire basket or book box with the pre-drilled pilot holes.
- NOTE:** Spacers (rubber washers) will be included with your parts and pieces if the wire basket/book box's tabs lap over the leg plate. If they do, you will need to first align the spacers over the pre-drilled pilot holes and then align the tabs of the wire basket/book box with the spacers. You may need to use two spacers per pre-drilled pilot hole if there still a gap between tab and spacer.



 
 
Step 3:

- Use #10 x 1¼" or #10 x ¾" square pan head screws to fasten each of the tabs of the wire basket or book box to the top. (See Part Identifier Key to see what type of square pan head screws to use.)

Tools Required

- Screw gun
- # R2 square bit

Part Identifier Key

Part #	Description (W" x D" x H")	Qty.	
04066826	17.13 x 14.50 x 4.25 metal wire basket (-LW)	1	
Hardware Kit 0404239	#10 x 1¼" square pan head screws <i>(Used to attach (-LW) wire basket to top)</i>	4 per kit	
04009603	19.13 x 14.83 x 4.25 metal book box (-AB)	1	
04066623	20 x 18.31 x 4.44 metal book box (-DB)	1	
04066698	14.75 x 16.31 x 4.19 (-LB)	1	
Hardware Kit 0401051	#10 x ¾" square pan head screws <i>(Used to attach (-AB, -DB & -LB) book boxes to top)</i>	10 per kit	
Hardware Kit 04066637	Spacers (rubber washers) <i>(Used under tabs of book boxes/wire basket if needed)</i>	20 per kit	

Book Boxes & Wire Basket Availability Chart for Desks

X = Available

ELO® Desk Model #'s	Description	Book Box-AB	Book Box-DB	Book Box-LB	Wire Basket-LW
ELO & ELR 6(7)600	ELO® Adapt			x	x
ELS & ELP	ELO® Adapt	N/A	N/A	N/A	N/A
ELO, ELR, ELS, & ELP 6(7)810	ELO® Adapt II			x	x
ELO, ELR, ELS, & ELP 6(7)601	ELO® Adapt XL			x	x
ELO, ELR, ELS, & ELP 6(7)813	ELO® Arcadia			x	x
ELO, ELR, ELS, & ELP 6(7)829	ELO® Aidacra			x	x
ELO, ELR, ELS, & ELP 6(7)400	ELO® Connect 4			x	x
ELO, ELR, ELS, & ELP 6(7)216	ELO® Connect 6	Call Estim.	Call Estim.	Call Estim.	Call Estim.
ELO, ELR, ELS, & ELP 6(7)217	ELO® Connect 8			x spacers	x
ELO, ELR, ELS, & ELP 6(7)318	ELO® Diamond		x	x	x
ELO, ELR, ELS, & ELP 6(7)816	ELO® Hurley			x	x
ELO, ELR, ELS, & ELP 6(7)316	ELO® Loyal			x spacers	x
ELO, ELR, ELS, & ELP 6(7)317	ELO® Mini Diamond			x	x
ELO, ELR, ELS, & ELP 6(7)809	ELO® Mini Nimbus	Call Estim.	Call Estim.	Call Estim.	Call Estim.
ELO 6(7)811	ELO® Mini Tide	x			x
ELR, ELS, & ELP 6(7)811	ELO® Mini Tide			x	x
ELO & ELR 6(7)500	ELO® Ocho	N/A	N/A	N/A	x
ELS & ELP 6(7)500	ELO® Ocho			x	x
ELO, ELR, ELS, & ELP 6(7)174	ELO® Plymouth			x	x
ELO, ELR, ELS, & ELP 6(7)171	ELO® Plymouth II			x	x
ELO, ELR, ELS, & ELP 6(7)173	ELO® Plymouth II-XL		x	x	x
ELO & ELR 6(7)814	ELO® Pyramid	x			x
ELS & ELP 6(7)814	ELO® Pyramid			x	x

UNE-T Desk Model #'s	Description	Book Box-AB	Book Box-DB	Book Box-LB	Wire Basket-LW
UNE6(7)142	UNE-T ADA		x	x	x
UNE6(7)610	UNE-T Adapt		x	x	x
UNE6(7)215	UNE-T Connect 8			x spacers	x
UNE6(7)316	UNE-T Loyal		x spacers	x spacers	x
UNE6(7)500	UNE-T Ocho		x	x	x
UNE6(7)362	UNE-T Plymouth (20"x27")		x	x	x
UNE6(7)064	UNE-T Plymouth (20"x36")		x	x	x
UNE6(7)145	UNE-T Plymouth (24"x27")		x	x	x
UNE6(7)363	UNE-T Plymouth II (20"x27")		x	x	x
UNE6(7)067	UNE-T Plymouth XL (24"x36")		x	x	x