




1-800-242-2303
wbmfg.com



ELO®/EON™ DESK/TABLE

 NOTE: These instructions are based on model #ELO7601-ADJ. These instructions work for all ELO®/EON™ desk & table models. Product images are for illustrative purposes only and may differ from actual product.



The assembly of this desk requires the assistance of another person.

TOOLS NEEDED



 
Drill




4mm Allen Wrench




4mm Hex Bit

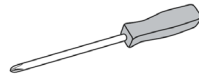

Phillips Screwdriver

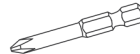 

Phillips Drill Bit

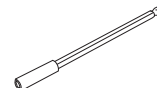 

Drill Bit Extension



Assistance











PARTS



PARTS x QTY

#	DESCRIPTION x QTY
A	Laminate Top x 1
B	Leg x Qty Varies
C	Leg Plate x Qty Varies (Attached to Leg)
D	Footing x Qty Varies
E	Backpack Hook x 1 (Optional)

HARDWARE x QTY

GLIDES	FASTENERS
 Hardware D x 1 per leg 2.5" Grand Hank nylon glide, 3/8"-16x1" 040164	 Hardware G x 6 per leg plate 1/4"-20x19mm joint connector bolts 04088861
 Hardware D x 1 per leg 1.5" soft touch glide 04067920	 Hardware J x 10 #8x3/4" screws 0404248
 Hardware D x 1 per leg 1.25" steel glide NSL-33056S	MISCELLANEOUS  Hardware E x 1 2" Backpack Hook 04066852
CASTERS  Hardware F x 1 per leg Dual wheel soft tread locking caster 04067540	 Hardware K x 1 Star Washer 04069034
	 Hardware M x 1 1/4"x20x25mm Joint connector bolt 04069034
	 Hardware H x 0-2 depending on model Support Bar 04009377 (42"), 04066738 (50") 0407127 (60"), 0407118 (72")

Item # 0600033 V08282024 Version subject to change



NOTE: Hardware packs are included in packaging. You may receive more hardware than needed. Discard any extra hardware after assembly.



 
CAUTION! Some parts may have sharp edges. Care must be taken when handling various pieces to avoid injury. For your safety, wear a pair of work gloves when assembling.

ASSEMBLY

1. Place **Part A** face down on a protected flat surface so threaded inserts are facing up.
2. Align pre-drilled holes in **Part C** (that is attached to **Part B**) with threaded inserts in **Part A**.

Using a screw gun, 4mm hex bit and a drill bit extension, connect **Part C** to **Part A** using **Hardware G**.

Repeat this step for the remaining legs.

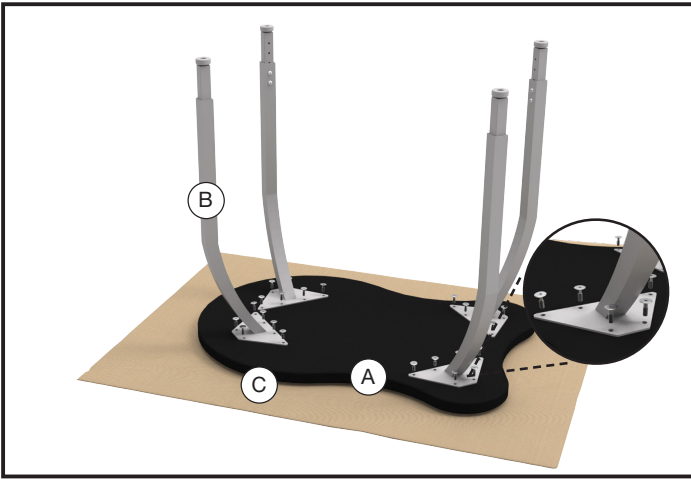


3. If your table requires **Hardware H**, align the bar(s) with the pre-drilled pilot holes in the top, attach using **Hardware J**.

4. If **Hardware D** or **Hardware F** was ordered, remove nylon glide from leg by rotating counter-clockwise until glide is free from **Part B**.


Place stem of **Hardware D** or **Hardware F** into the hole of the leg. Rotate clockwise until fully inserted into the leg.

 Tighten with a 14mm open-ended wrench (only with dual-wheel casters.)

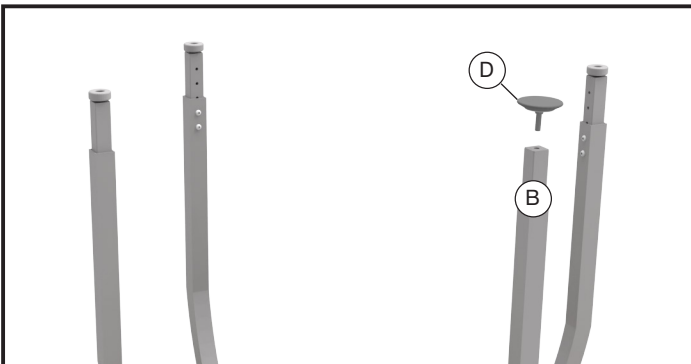


NOTE: Casters are not to be used as a leveling device. Please make sure that casters are tightened all the way to prevent possible damage to the stem of the caster.

 5. If **Hardware E** was ordered, place **Hardware M** through the backpack hook, then through **Hardware K**. Fasten through **Part C** to **Part A**.

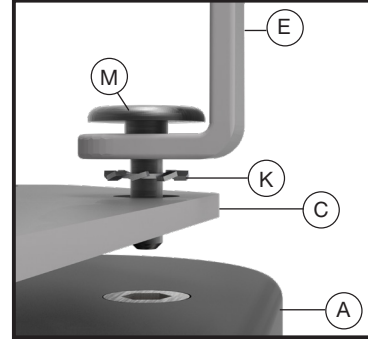

 6. Adjust legs to desired height while the desk is still face down on a protected flat surface.
7. Using the provided hex wrench, turn both M6 bolts (located at the bottom of the most-outer tube of the leg) counterclockwise, until the inner tube of the leg moves up and down freely.
8. Adjust the leg to the desired height. Using the wrench, turn both M6 bolts clockwise until fully tightened. Repeat for the remaining legs.

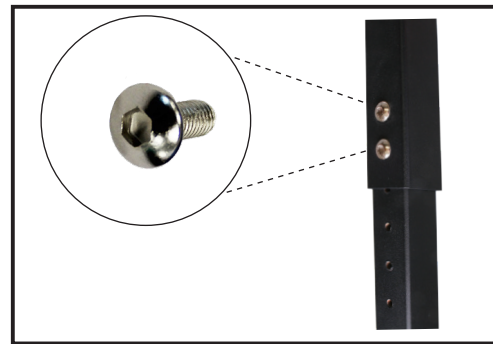

9. With assistance, turn desk upright.

