

## LOBO TABLE WITH HARDWOOD TOP




NOTE: Before you begin, please make sure all parts and proper quantities are included. Any parts damaged during shipment must be reported within 24 hours of receipt. To report information regarding damages or if you have any questions, please call 800-242-2303.

### TOOLS NEEDED



Drill



#S2 Square Bit



1/2" Wrench  
7/16" Wrench




Assistance



NOTE: These instructions are based on model #LOB9108-ADJ-G-HDCA. These instructions work for all LOBO Table with Hardwood Top models. Product images are for illustrative purposes only and may differ from actual product.



## PARTS

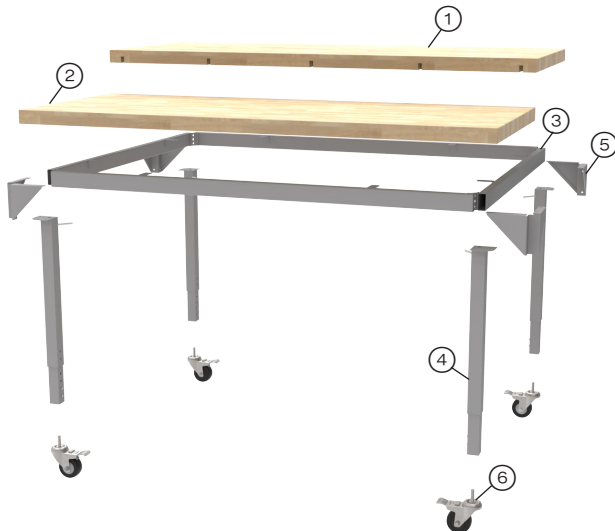

### PARTS x QTY

| # | DESCRIPTION x QTY     |
|---|-----------------------|
| 1 | Hardwood Top Half x 1 |
| 2 | Hardwood Top Half x 1 |
| 3 | LOBO Frame x 1        |
| 4 | LOBO Leg x 4          |
| 5 | Gusset x 4            |
| 6 | Heavy-Duty Caster x 4 |

### HARDWARE x QTY

|                                                                                                                                                      |                                                                                                                                                                            |
|------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br>Tite Joint Fastener x Varies<br>0406902                     | <br>Hardware Pack for -ALR & -ABP Legs - 04066968<br>1/4" Star Washer x 4<br>04067460 |
| <br>#10 x 3/4" Square Pan Screw x 26<br>0408231                 | <br>M6 1x18 Screw x 4<br>04068064                                                     |
| <br>5/16" Lock Washer x 4<br>040379                             | <br>Hardware Pack for -ADJ Legs - 04002020<br>1/4" Star Washer x 4<br>04067460        |
| <br>5/16" Hex Nut x 4<br>040379                                 | <br>M6 1x14 Screw x 4<br>0401259                                                      |
| <br>#10-16 x 3/4" Hex Head Self-Drilling Screw x 32<br>04009742 |                                                                                                                                                                            |

### LOBO Adjustable & Fixed Legs

| Model #  | Smooth Silver Sku # | Black Sku# | Description                         |
|----------|---------------------|------------|-------------------------------------|
| LOB -ADJ | 0409195-G4          | 0409195    | LOBO 1.5" (40mm) Square Adj. Leg    |
| LOB -ALR | 0409193-G4          | 0409193    | LOBO 2" (50mm) Round Adj. Leg       |
| LOB -ABP | N/A                 | 0409196    | LOBO 2" (50mm) Big Paw Sq. Adj. Leg |
| LOB -FX  | 0409194-G4          | 0409194    | LOBO 1.5" (40mm) Square Fixed Leg   |



LOB -ADJ LOB -ALR LOB -ABP LOB -FX

Specifications are subject to change. Product images are for illustrative purposes only and may differ from the actual product.



The assembly of this table requires the assistance of another person.




**CAUTION!** Some parts may have sharp edges. Care must be taken when handling various pieces to avoid injury. For your safety, wear a pair of work gloves when assembling.




**NOTE:** Hardware packs are included in packaging. You may receive more hardware than needed. Discard any extra hardware after assembly.

## ASSEMBLY


- 1a. If assembling a hardwood top that has a depth of 36" or less, it will be in one piece. Place the top face down on a protected flat surface. Proceed to Step 3.
- 1b. If assembling a hardwood top that has a depth greater than 36", top will be in 2 pieces (.5" undersized on length). Place both top halves face down on a protected flat surface. Align together the dog bone holes on both tops.

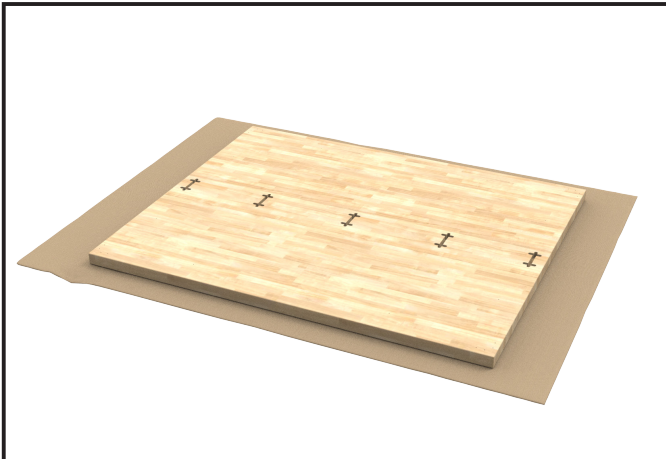

2. Adjust tite joint fastener to the size of the field joint opening and then place the fastener into each opening. Using a  $\frac{7}{16}$ " wrench, tighten each fastener so that both tops are securely clamped together.

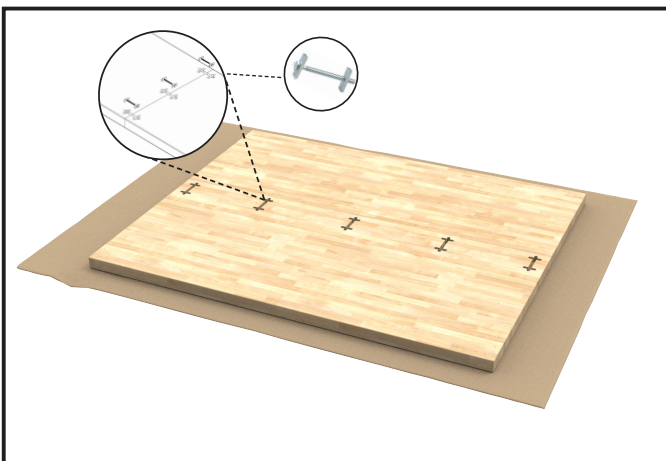


3. Place LOBO frame tabs down on top of the top and align tabs with pre-drilled pilot holes.
4. Using a #S2 square bit, secure the frame to top with #10 x  $\frac{3}{4}$ " square pan screws, one screw per tab.

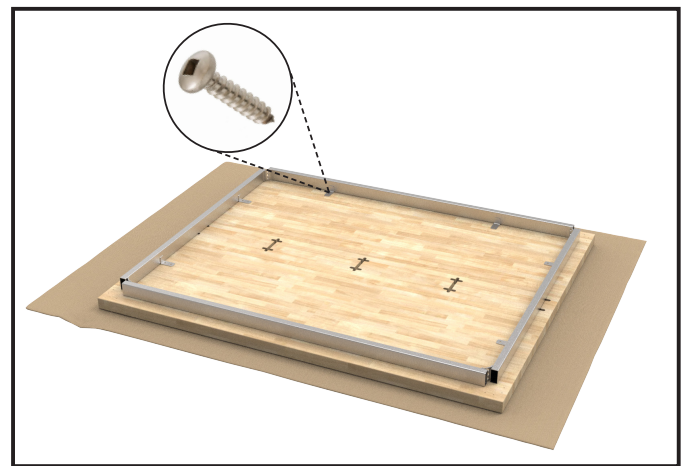

5. Starting at one corner, place the  $\frac{5}{16}$ " bolt that is welded to leg through corner support brace of frame.

Place the  $\frac{5}{16}$ " lock washer and  $\frac{5}{16}$ " hex nut onto the leg bolt and tighten with a  $\frac{1}{2}$ " wrench.

Repeat for remaining legs.

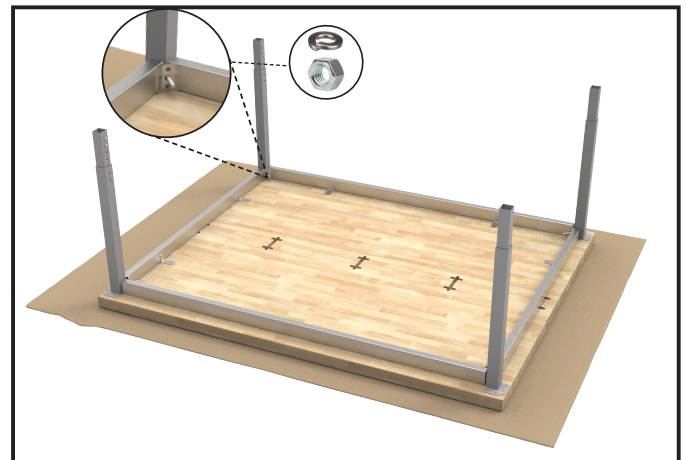


## ASSEMBLY

6. Place gusset in corner where leg and frame meet. Use a rubber mallet to tap the #10 self-drilling screws into place.

7. Use a screw gun along with a  $\frac{5}{16}$ " hex bit to finish fastening the gussets to the leg and frame with the #10 self-drilling screws.


Repeat for remaining gussets.

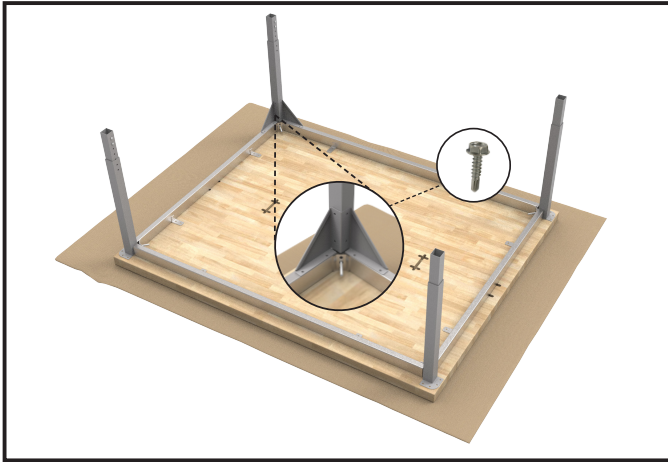

10. Place stem of optional footing into the hole on the leg. Rotate clockwise until fully inserted into leg.

11. Tighten with a wrench.

Repeat for each caster or glide.

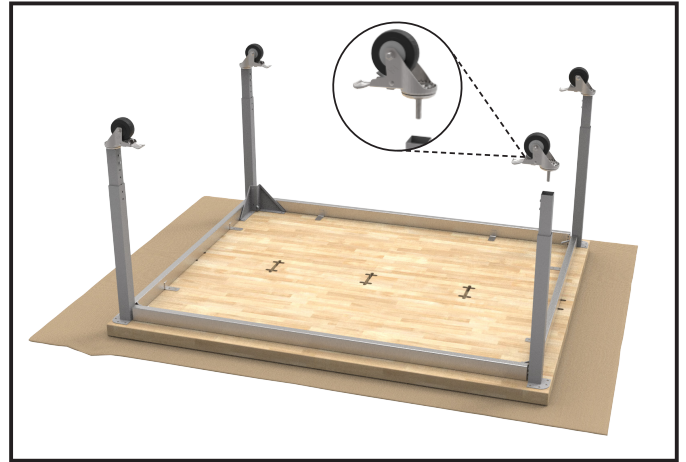

NOTE: Casters are not to be used as a leveling device. Loctite on casters will cause some resistance while tightening, please make sure that casters are tightened all the way to prevent possible damage to the stem of the caster.



8. Adjust legs to desired height.

9. Remove nylon glide from leg by rotating counter clockwise until glide is free.