

Assembly Instructions

Conference Tables

Laminate Base

Before you begin, please make sure all parts and proper quantities are included. (See Part Identifier Key) Any parts damaged during shipment must be reported within 24 hours of receipt. To report information regarding damages or if you have any questions, please call 800.242.2303.



- #2 square bit
- · Screw gun
- · 4mm Allen wrench OR
- 4mm hex bit



Step 1:

Place top face down on a protected flat surface.

Step 2:

- Locate one of the laminate legs. Align the pre-drilled pilot holes on the leg with the pre-drilled holes on the top.
- Using a #2 square drive screw driver or a #2 square bit, secure leg to top with angle brackets and #10 x 3/4" square
- DO NOT FULLY TIGHTEN until Step 6.

Step 3:

- Align threaded inserts in the modesty panel with the pre-drilled pilot holes in the leg.
- Using a 4mm Allen wrench or 4mm Hex bit and a screw gun, secure modesty panel to leg with 1/4" - 20 x 2.359" joint connector bolts.
- Use (4) bolts total to connect panel to leg.
- DO NOT FULLY TIGHTEN until Step 6.

Step 4:

- With modesty panel in place, use a #2 square drive screw driver or a #2 square bit and secure modesty panel to top with angle brackets and #10 x ³/₄" square pan screws.
- DO NOT FULLY TIGHTEN until Step 6.

Step 5:

Repeat Steps 2-4 with the second leg.


• Fully tighten legs and modesty panel angle brackets.


Step 7:

• Place base leveler M10 into the hole on the bottom of one of the legs. Rotate clockwise until fully inserted into the leg. Repeat this for the remaining (3) levelers.

Step 8:

• With the help of another person, turn the table over to the upright position.

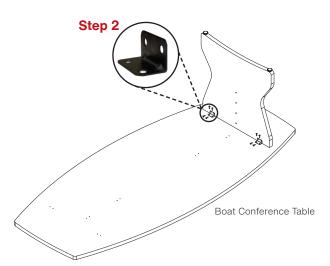

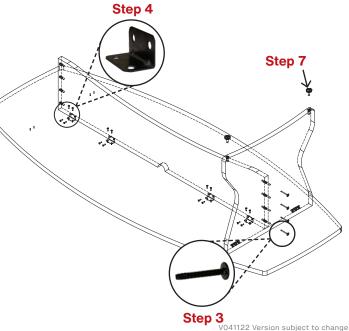



Assembly Instructions

Conference Tables

Laminate Base

Part Identifier Key

Step #	Part #	Description	Qty.	
Step 2 Step 4	0406829	27mm x 27mm x 50mm angle brackets	8	
Step 2 Step 4	0406711	#10 x ³ / ₄ " square pan screws	32	
Step 3	0406900	1/4" - 20 x 2.359" joint connector bolts	8	
Step 7	0406509	Base leveler M10	4	