

Postformed Overview: High-pressure laminate bonded to a machine formed edge. Postformed laminate tops only available on rectangle and square tops.

Specifications:

Thicknesses -

180° Bullnose - 0.15", 1.25" (standard), 1.625"
 90° Modern Edge - 1.625"

Finishes - Standard or custom laminates. Also available in chemical resistant laminate (CR) or electro-static dissipative (ESD) laminate*

Sizes - Up to 48"D x 144"L

Core Material - Industrial grade particleboard or medium density fiberboard (MDF)

Edge Profiles - 90° modern edge (-MD), 180° bullnose edge (-BN) (standard)

Backer - Phenolic backer on 0.75" and 1.25" tops, Resin backer on 1.625" or 1.75" tops

Options - Grommet holes, drilling, inserts, mitre joint or feild joint, notches, sink cutout, angle cut, postformed opposite sides, laminate backer substitution, 4" x 1" thick square PVC edge backsplash

Drilling - Fasteners with deep threads are recommended. Pre-drilling the holes is recommended. Take into consideration the thickness of the top when selecting screw length for the edge, bottom or top surface. Drilling is not recommended through the edge of a MDF core.

Cutting - A sharp, carbide cross-cut blade is recommended. Cut the top bottom side up to prevent chipping. In instances where the top can only be cut top side up tape the edge that will be cut and make the cut line through the center of the tape.


Care & Maintenance: The laminate surface may be cleaned with warm water and mild soaps, such as those used for hands or dishes. Heavy solvents can effect edging adhesion.

Disinfection: During the COVID-19 pandemic there is a need for ongoing and extensive disinfection of surfaces and materials. For a list of US EPA's Disinfectants for Use Against COVID-19: <https://www.epa.gov/pesticide-registration/list-n-disinfectants-use-against-sars-cov-2>

If surfaces are dirty, they should be cleaned using a detergent or soap and water prior to disinfection. Follow manufacturer's instructions for all cleaning and disinfection products for concentration, application method and contact time, etc.

Always rinse thoroughly with warm water and soap after appropriate use of diluted bleach solution. Exposure (contact or kill time) should not exceed the CDC


recommended time due to the effects on the surface due to over-exposure and possible degradation of the surface. Etching and surface degradation was observed slightly on various diluted solutions using hypochlorite based products.

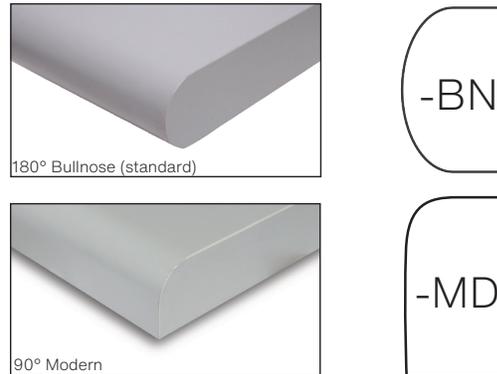

Fastener and Pilot Hole Chart:

| Screw Size # | Pilot Hardwood |
|--------------|----------------|
| 4 | 1/16" |
| 6 | 5/64" |
| 8 | 3/32" |
| 10 | 7/64" |
| 12 | 1/8" |

Optional Features:

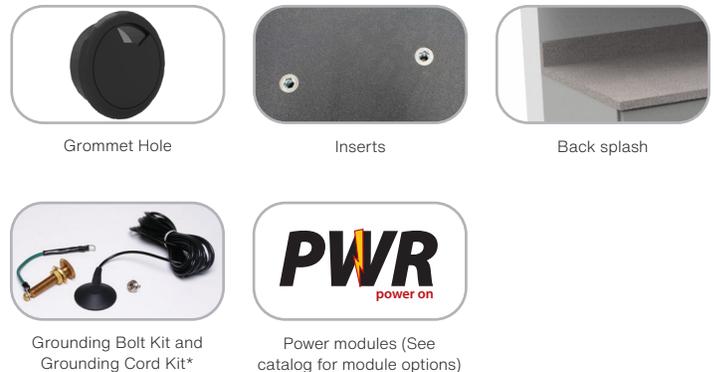

*In order to operate all anti-static tops effectively, grounding bolt/cord must be attached to a reliable earth ground connection. All Tops over 72" are recommended to have two Grounding bolt kits.

Shipping Details

Class: 70
NMFC#: 83620-2
Ground: Yes, with limitations
Package: Carton