



1-800-242-2303
wbmfg.com

WIRE BASKET



NOTE: Instructions are based on the EON™ Plymouth II desk but can be used for any ELS®, ELO® or UNE-T desks.



NOTE: Before you begin, please make sure all parts and proper quantities are included.




TOOLS NEEDED



Drill
ONLY



Do NOT use
Impact Driver

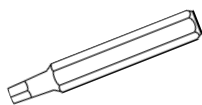


R2 Bit



Assistance


PARTS

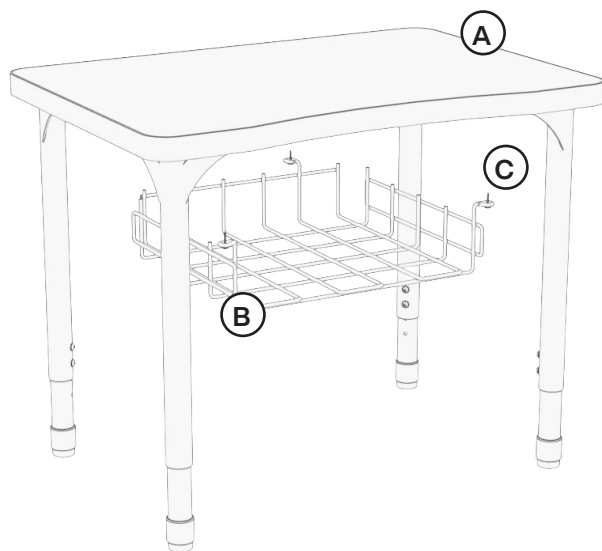

PARTS x QTY

#	DESCRIPTION x QTY
A	Assembled ELS7366-EJA Desk x 1
B	-LW Metal Wire Basket x 1
C	#10 x 1-1/4" square pan head screws x 7

HARDWARE X QTY

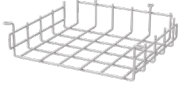FASTENERS	WIRE BASKET
  Hardware Kit C x 4 per Kit #10 x 1-1/4" square pan head screws 0404239	 Hardware B x 1 per leg 17.13 x 14.50 x 4.25 metal wire basket (-LW) 04066826
 Hardware Kit D x 20 per Kit Spacers (rubber washers) (Used under tabs of book boxes/wire baskets if needed) 04066637	

INSTALLATION REQUIREMENTS

Recommended Installation Range	5.5 - 6.0 ft-lb (66 - 72 in-lb) ≈70 - 75% of strip torque
Maximum (Do Not Exceed) Beyond this, thread damage risk	6.0 ft-lb (72 in-lb)
Typical Angle After Snug Expected rotation on low-speed driver	30° ± 10°

*Drill should be set to Low speed setting.




NOTE: Hardware packs are included in packaging. You may receive more hardware than needed. Discard any extra hardware after assembly.



The assembly of this desk accessory requires the assistance of another person.


ASSEMBLY

1. With the help of another person, place **Part A** face down on a protected flat surface so the pre-drilled pilot holes are facing up. Legs are to be pre-assembled to the top before assembling the wire basket. *Pre-drilled pilot holes are shown in red for illustrative purposes only.*

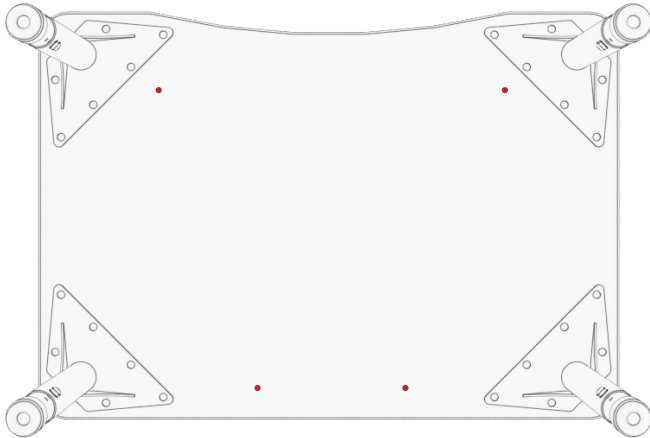


NOTE: Use rubber spacer washer where needed for assembly.

2. Align pre-drilled holes in **Part B** the wire basket tabs over the pre-drilled pilot holes (shown in red) on **Part A**.

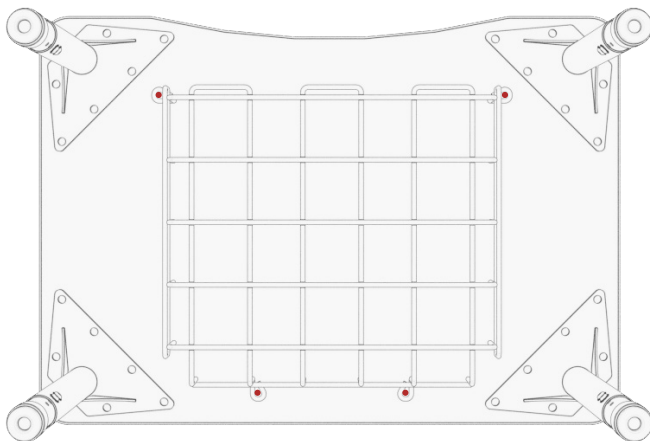

3. Use a long R2 drive bit and a drill to fasten **Hardware C (wood screw)** through each tab on the plastic book box and into the desktop. **Torque to 5.7 ft/lb*

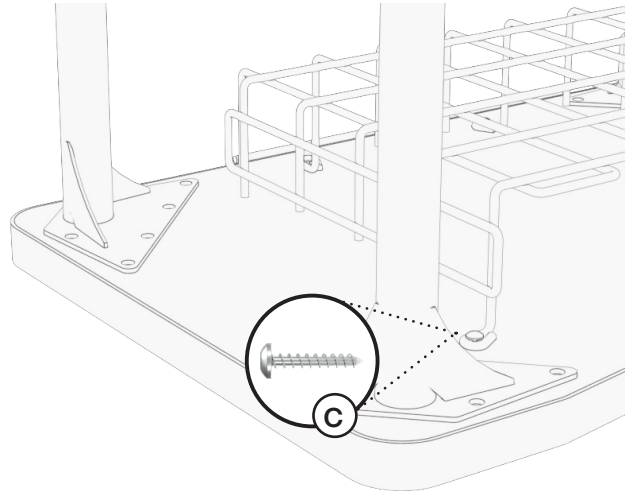

CAUTION! Only use WOOD SCREWS when attaching to wire basket to desktop. *Torque screws to 5.7 ft/lb*

4. With the help of another person, turn desk over to the upright position.



Assistance